

performing a “hard reset” on a Chromebook

If you have a Chromebook that won't charge, or won't wake up, a hard reset might fix the issue. Press the reset button + power button (you may also need to plug it in). Try this 2-3 times and the Chromebook should turn on or start responding to the charger. If it still won't wake up, submit a [work order](#).

